

**Hemisphere**  
GPS



# **Bantam**

## **Installation Guide**

Part No. 875-0265-000 Rev. A1

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## Copyright Notice

Hemisphere GPS Precision GPS Applications

Copyright © Hemisphere GPS (2010). All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GPS.

## Trademarks

Hemisphere GPS®, the Hemisphere GPS logo, A220™, A221™, AerialACE™, AirStar™, AirTrac™, BaseLineHD™, BEELINE®, COAST™, Contour Lock™, Crescent®, Earthworks®, Eclipse™, e-Dif®, eDrive®, eDriveTC™, eDriveX™, G100™, GPSteer™, IntelliFlow®, Just Let Go™, L-Dif™, LiteStar II™, LV101™, MapStar®, Outback™, Outback 360™, Outback Guidance Center™, Outback Guidance®, Outback Hitch™, Outback S™, Outback S2™, Outback S3™, Outback S-Lite™, Outback Sts™, Outback Steering Guide™, PocketMAX PC™, PocketMAX™, Satloc M3™, Satloc®, the Satloc logo, V101™, V111™, VS101™, VS111™, Vector™, X200™, and X300™ are proprietary trademarks of Hemisphere GPS. Other trademarks are the properties of their respective owners.

## Patents

The Outback S™ and S-Lite™ automated navigation and steering guide system is covered by U.S. Patents No. 6,539,303 and No. 6,711,501. The Outback Hitch™ automated hitch control system is covered by U.S. Patent No. 6,631,916. The Outback eDriveTC™ GPS assisted steering system is covered by U.S. Patent No. 7,142,956. Hemisphere GPS products may be covered by one or more of the following U.S. Patents:

6,111,549	6,397,147	6,469,663	6,501,346	6,539,303
6,549,091	6,631,916	6,711,501	6,744,404	6,865,465
6,876,920	7,142,956	7,162,348	7,277,792	7,292,185
7,292,186	7,373,231	7,400,956	7,400,294	7,388,539
7,429,952	7,437,230	7,460,942		

Other U.S. and foreign patents pending.

## **Notice to Customers**

Contact your local dealer for technical assistance. To find the authorized dealer near you, contact us at:

Hemisphere GPS  
2207 Iowa Street  
Hiawatha, KS 66434  
Phone: 785-742-2976  
Fax: 785-742-4584  
ground@hemispheregps.com  
www.hemispheregps.com

## **Documentation Feedback**

Hemisphere GPS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GPS with any feedback regarding this guide by writing to the following email address: DocFeedback@hemispheregps.com.

## WARRANTY NOTICE

**COVERED PRODUCTS:** This warranty covers all products manufactured by Hemisphere GPS and purchased by the end purchaser (the "Products"), unless otherwise specifically and expressly agreed in writing by Hemisphere GPS.

**LIMITED WARRANTY:** Hemisphere GPS warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth below, that the Products sold to such end purchaser and its internal components shall be free, under normal use and maintenance, from defects in materials, and workmanship and will substantially conform to Hemisphere GPS's applicable specifications for the Product, for a period of 12 months from delivery of such Product to such end purchaser (the "Warranty Period"). Repairs and replacement components for the Products are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship, and will substantially conform to Hemisphere GPS's applicable specifications for the Product, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater.

**EXCLUSION OF ALL OTHER WARRANTIES.** The LIMITED WARRANTY shall apply only if the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GPS's relevant User's Manual and Specifications, AND the Product is not modified or misused. The Product is provided "AS IS" and the implied warranties of MERCHANTABILITY and FITNESS FOR A PARTICULAR PURPOSE and ALL OTHER WARRANTIES, express, implied or arising by statute, by course of dealing or by trade usage, in connection with the design, sale, installation, service or use of any products or any component thereof, are EXCLUDED from this transaction and shall not apply to the Product. The LIMITED WARRANTY is IN LIEU OF any other warranty, express or implied, including but not limited to, any warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, title, and non-infringement.

**LIMITATION OF REMEDIES.** The purchaser's EXCLUSIVE REMEDY against Hemisphere GPS shall be, at Hemisphere GPS's option, the repair or replacement of any defective Product or components thereof. The purchaser shall notify Hemisphere GPS or a Hemisphere GPS's approved service center immediately of any defect. Repairs shall be made through a Hemisphere GPS approved service center only. Repair, modification or service of Hemisphere GPS products by any party other than a Hemisphere GPS approved service center shall render this warranty null and void. The remedy in this paragraph shall only be applied in the event that the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GPS's relevant User's Manual and Specifications, AND the Product is not modified or misused. NO OTHER REMEDY (INCLUDING, BUT NOT LIMITED TO, SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS) SHALL BE AVAILABLE TO PURCHASER.

even if Hemisphere GPS has been advised of the possibility of such damages. Without limiting the foregoing, Hemisphere GPS shall not be liable for any damages of any kind resulting from installation, use, quality, performance or accuracy of any Product.

**HEMISPHERE IS NOT RESPONSIBLE FOR PURCHASER'S NEGLIGENCE OR UNAUTHORIZED USES OF THE PRODUCT.** IN NO EVENT SHALL HEMISPHERE GPS BE IN ANY WAY RESPONSIBLE FOR ANY DAMAGES RESULTING FROM PURCHASER'S OWN NEGLIGENCE, OR FROM OPERATION OF THE PRODUCT IN ANY WAY OTHER THAN AS SPECIFIED IN HEMISPHERE GPS'S RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GPS is NOT RESPONSIBLE for defects or performance problems resulting from (1) misuse, abuse, improper installation, neglect of Product; (2) the utilization of the Product with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Hemisphere GPS; (3) the operation of the Product under any specification other than, or in addition to, the specifications set forth in Hemisphere GPS's relevant User's Manual and Specifications; (4) damage caused by accident or natural events, such as lightning (or other electrical discharge) or fresh/salt water immersion of Product; (5) damage occurring in transit; (6) normal wear and tear; or (7) the operation or failure of operation of any satellite-based positioning system or differential correction service; or the availability or performance of any satellite-based positioning signal or differential correction signal.

**THE PURCHASER IS RESPONSIBLE FOR OPERATING THE VEHICLE SAFELY.** The purchaser is solely responsible for the safe operation of the vehicle used in connection with the Product, and for maintaining proper system control settings. UNSAFE DRIVING OR SYSTEM CONTROL SETTINGS CAN RESULT IN PROPERTY DAMAGE, INJURY, OR DEATH. The purchaser is solely responsible for his/her safety and for the safety of others. The purchaser is solely responsible for maintaining control of the automated steering system at all times. THE PURCHASER IS SOLELY RESPONSIBLE FOR ENSURING THE PRODUCT IS PROPERLY AND CORRECTLY INSTALLED, CONFIGURED, INTERFACED, MAINTAINED, STORED, AND OPERATED IN ACCORDANCE WITH HEMISPHERE GPS'S RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GPS does not warrant or guarantee the positioning and navigation precision or accuracy obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Hemisphere GPS literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on performance specifications provided by the satellite service operator (i.e. US Department of Defense in the case of GPS) and differential correction service provider. Hemisphere GPS reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

**GOVERNING LAW.** This agreement and any disputes relating to, concerning or based upon the Product shall be governed by and interpreted in accordance with the laws of the State of Arizona.

**OBTAINING WARRANTY SERVICE.** In order to obtain warranty service, the end purchaser must bring the Product to a Hemisphere GPS approved service center along with the end purchaser's proof of purchase. Hemisphere GPS does not warrant claims asserted after the end of the warranty period. For any questions regarding warranty service or to obtain information regarding the location of any of Hemisphere GPS approved service center, contact Hemisphere GPS at the following address:

**Hemisphere GPS**

8444 N. 90th Street, Suite 130

Scottsdale, AZ 85258

Phone: 480-348-9919 Fax: 480-348-6370

techsupport@hemispheregps.com

www.hemispheregps.com



---

# Contents

---

**Chapter 1    Getting Started**

    Parts List . . . . . 2

    Component Weights . . . . . 5

    Planning the Installation . . . . . 5

**Chapter 2    Mounting the Components**

    CPU . . . . . 8

    Touchscreen . . . . . 9

        The 7" Touchscreen Mounting Kit . . . . . 9

        Mounting the 7" Touchscreen . . . . . 11

        The 8.4" Touchscreen Mounting Kit . . . . . 12

        Mounting the 8.4" Touchscreen . . . . . 12

    Power Panel . . . . . 14

        Power Panel Mounting Location . . . . . 14

        Mounting the Power Panel . . . . . 14

    Lightbar . . . . . 15

        Lightbar Mounting Location . . . . . 15

        The Lightbar Mounting Kit . . . . . 15

        Mounting the Lightbar . . . . . 16

    Antenna . . . . . 19

        Mounting Location . . . . . 19

        Mounting the Antenna . . . . . 19



**Chapter 3 Connecting the CPU**

Warnings . . . . . 22

    General Cable Connection Warnings . . . . . 22

    Antenna Cable Warning . . . . . 22

Connections Diagram . . . . . 23

Connecting Cables . . . . . 23

    Connecting the GPIO Cable . . . . . 24

    Connecting the Lightbar Cable . . . . . 24

    Connecting the Antenna Cable . . . . . 24

    Connecting a Keyboard and/or Mouse . . . . . 25

    Using the Flow Control Port . . . . . 25

    Connecting the Video (VGA) Cable . . . . . 25

    About the Power Cable . . . . . 25

    Connecting the Power Cable . . . . . 26

    Connecting the USB Extension Cable . . . . . 27

**Chapter 4 Operating Bantam**

Powering the System . . . . . 30

    Turning the CPU and Screens On . . . . . 30

Inserting and Removing the USB Flash Drive . . . . . 31

Understanding the 7" Screen Control Panel . . . . . 31

Adjusting the Display Brightness . . . . . 33

Adjusting the Lightbar Brightness . . . . . 33

Calibrating the Touchscreen . . . . . 33

Turning the System Off . . . . . 34

**Index . . . . . 35**



**End User License Agreement.....39**







## **Chapter 1: Getting Started**

Parts List

Component Weights

Planning the Installation

**T**he Bantam is a modular system that features a powerful CPU in a rugged aluminum box. The CPU contains a serial port for each module. Each module of the system connects to the CPU via a specific cable.

The system modules that ship with the Bantam and connect to the CPU are:

- 7" or 8.4" color touchscreen
- Lightbar
- Antenna
- Optional switches (spray on/off, swath advance)

---

**⚠ WARNING:** Read this entire manual before beginning installation. Failure to follow the instructions in this manual could void your warranty.

Pay careful attention to safety reminders and warnings to eliminate the possibility of personal injury or damage to the system. Comply with all electrical connections and requirements to prevent damage to the system.

---

## Parts List

Review the contents of your Bantam purchase to ensure the components are not damaged. The contents will vary depending on whether you ordered a 7" or 8.4" screen.

**Table 1-1: Bantam main parts list**

Component	Part Number	Qty
Bantam switches and kits. See Table 1-2.	880-1031-000	
Bantam cables. See Table 1-3.	880-1030-000	
Bantam CPU	806-1062-000#	1
Bantam Installation Guide (this manual)	875-0265-000	1
AirTrac User Guide	875-0105-001	1
AirTrac Quick Reference Guide	875-0136-001	1



**Table 1-1: Bantam main parts list (continued)**

Component	Part Number	Qty
A21 L-Band antenna (with mounting template)	804-3036-000#	
Color touchscreen - 7" <i>or</i>	380-0016-000#	1
Color touchscreen - 8.4"	806-3015-000	1
Lightbar - V1	806-2011-03A	1
Lightbar cable	051-0022-001	1
Antenna cable	052-0005-000#	1

**Table 1-2: Bantam parts list - switches and kits**

Component	Part Number	Qty
Warranty statement	875-0066-001	1
Push switch (for use with GPIO cable 051-0244-000#, see Table 1-3). This is the optional swath advance switch.	075-4002-000	1
Lever switch (for use with GPIO cable 051-0244-000#, see Table 1-3). This is the spray on/off switch.	075-4001-000#	1
Lightbar mounting kit. See "The Lightbar Mounting Kit" on page 15.	710-0029-002	1
MapStar kit (CD and MapStar User Guide)	710-0021-007	1
USB kit (extension cable, USB connector, USB flash drive). See "Inserting and Removing the USB Flash Drive" on page 31.	710-0087-000	1



**Table 1-2: Bantam parts list - switches and kits (continued)**

Component	Part Number	Qty
Mounting kit - 7" touchscreen (mounting plates with mounting template). See "Mounting the 7" Touchscreen" on page 11.	710-0096-000#	1
<i>or</i>		
Mounting kit - 8.4" touchscreen (ball sockets and arm mount). See "Mounting the 8.4" Touchscreen" on page 12.	604-0013-000#	1
2GB USB flash drive (spare)	750-1083-000	1

**Table 1-3: Bantam parts list - cables**

Component	Part Number	Qty
Lightbar cable (CPU to lightbar)	051-0022-001	1
Video cable (CPU to touchscreen)	051-0243-000#	1
GPIO cable (CPU to optional spray on/off switch, optional swath advance switch, serial [DB9] connector)	051-0244-000#	1
Antenna cable	052-0005-000#	1
Power cable assembly. (Includes mountable panel with power switch [for the CPU], circuit breaker and dimmer switch to control the lightbar brightness.)	726-1096-000#	1



## Component Weights

**Table 1-4: Component weights**

Component	Weight
CPU	8.58 pounds (3.89 kg)
Touchscreen - 7"	1.35 pounds (0.61 kg)
Touchscreen - 8.4"	4.46 pounds (2.02 kg)
Lightbar V1	4.2 pounds (1.91 kg)
Complete cable set	7.0 pounds (3.18 kg)
Antenna	0.75 pounds (0.34 kg)

## Planning the Installation

---

**▲WARNING:** Before beginning the installation, plan it by considering:

- Cable lengths
  - Clearance space
  - Power source
  - Vehicle structure
  - Visibility
  - Balance (air installations)
- 

In planning your installation locations, see Chapter 3, "Connecting the CPU" for a visual overview of how the components are connected.







## **Chapter 2: Mounting the Components**

CPU

Touchscreen

Power Panel

Lightbar

Antenna

**B**efore installing any components, read the short section “Planning the Installation” on page 5.

---

**⚠ WARNING:** Review all warnings in Chapter 3, “Connecting the CPU” before attempting to connect any of the components together using the supplied cables. Connecting cables improperly can damage your system.

---

---

**⚠ WARNING:** Consider using existing hardware and hardware locations. Avoid drilling holes that may damage other equipment (such as structural frame members, electrical cables, or fluid lines).

---

Where hardware, such as screws, washer and nuts, is not provided for a particular mounting or installation, you will need to provide the hardware appropriate to your particular needs.

## **CPU**

The CPU is a semi-permanent fixture once installed—there is no quick release mechanism.

Install the CPU in any location inside the vehicle that has the necessary room and is sheltered from the elements, for example in a storage compartment, in the cab, behind the seat. The CPU must have sufficient clearance to be accessible for attaching/removing cables (front and both sides) and for inserting and removing the USB flash drive (however, see “Inserting and Removing the USB Flash Drive” on page 31).

Obtain the necessary hardware to secure the CPU through its fitting points at each corner and install it in your selected location.

---

**⚠ WARNING:** Do not mount the CPU vertically. The CPU must be mounted on a horizontal surface.

---



## Touchscreen

Mount the touchscreen inside the cockpit or cab of the vehicle where it is:

- Easily visible while flying or driving
- Within arm's reach

---

**⚠ WARNING:** Do not obstruct the view or access to other instruments or the flying or driving visibility of the pilot or driver.

---

## The 7" Touchscreen Mounting Kit

**Note:** You will need to be able to get behind the dashboard to secure the dash mounting plate.

---

The 7" touchscreen comes with a template, mounting plates and mounting hardware as follows:

**Table 2-1: 7" touchscreen mounting kit**

Item	Description/usage	Part Number	Qty
1	Touchscreen mounting plate. Mounts on the touchscreen for mounting on the dashboard plate (item 5).	601-1203-000#	1
2	Screws, flat head M2.5 x 8mm - secure plate to back of touchscreen.	675-1207-000#	4
3	Screws, flat head M2.5 x 5mm - secure plate to base of touchscreen.	675-1137-000#	2
4	Template for the dashboard mounting plate. Cut out and stick on the dashboard, drill as indicated.	N/A	1
5	Dashboard (threaded) mounting plate. Mounts on dashboard. Touchscreen mounting plate attaches to this plate.	601-120000#	1



**Table 2-1: 7" touchscreen mounting kit (continued)**

Item	Description/usage	Part Number	Qty
6	Screw, washer and nut. Attach dashboard plate to dash.	675-1208-000# (screw) 678-10990000000 (washer) 676-1066-000# (nut)	4 4 4
7	Threaded knobs (also known as 'flowerette thumb screws'). Attach touchscreen and plate assembly to dashboard plate.	679-1011-000#	2



### Mounting the 7" Touchscreen



1. Attach the touchscreen mounting plate to the touchscreen. Use the four 8 mm (length) screws into the back of the touchscreen, the two 5 mm screws into the bottom of the touchscreen.
2. Cut out the supplied template and place it on a clear area of the dashboard.

---

**Note:** You must be able to get behind the dashboard to attach washers and nuts.

---

3. Drill the dashboard using the template then, using the four screws, washers and nuts, attach the dashboard mounting plate to the dashboard.

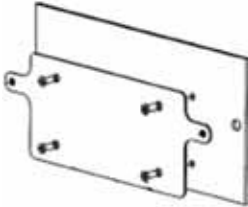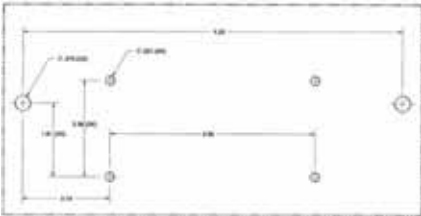

4. Using the two thumb screws, attach the touchscreen and its plate to the dashboard plate.



### The 8.4" Touchscreen Mounting Kit

The 8.4" touchscreen comes with a ball mount assembly as follows:

**Table 2-2: 8.4" touchscreen mounting kit**

Item	Description/Usage	Part number	Qty
1	RAM mount assembly, 10IU	603-1004-000#	1
2	Nut, 8-32 hex self-locking SS	676-1018-000#	4
	Washer, flat, #8	678-1010-000	4

### Mounting the 8.4" Touchscreen

1. Identify the best available location for the ball and arm mount.
2. Using your own hardware, attach one ball mount to a suitable structure/surface on the vehicle.



3. Using the provided nuts and washers, mount the other ball on the studs on the back of the touchscreen.



4. With the arm installed between the two ball mounts, set the touchscreen in a suitable position then tighten the handle. (When loosening the handle, the socket on the sprung side of the arm opens first.)



## Power Panel



### Power Panel Mounting Location

Mount the power panel—part of cable harness part number 726-1096-000#—inside the cockpit or cab of the vehicle. The power panel must be within arm's reach.

---

**▲WARNING:** Do not obstruct the view or access to other instruments or the flying or driving visibility of the pilot or driver.

---

### Mounting the Power Panel

1. Find an appropriate location in your cockpit or cab to mount the power panel. It must be within easy reach of the pilot or driver.
2. Depending on the selected location and vehicle type, use the appropriate hardware (not supplied) to attach the power panel to the vehicle.



## Lightbar

The lightbar installation is the same for aircraft and ground vehicles.

### Lightbar Mounting Location

Mount the lightbar in front of the cockpit or cab at a comfortable viewing distance. You can mount the lightbar either inside or outside of the cockpit or cab.

---

**⚠ WARNING:** Do not block the view of the pilot or driver.

---

### The Lightbar Mounting Kit

The lightbar mounting kit—part number 710-0029-002—contains these items:

**Table 2-3: Lightbar mounting kit**

Item	Description/usage	Part number	Qty
1	Flat panel plate	603-1005-000 (right side) 603-1006-000 (left side)	2
2	Screw, #8-32 (attach item 1 plate to lightbar)	675-1100-000	2
3	Bracket – 1"	602-1007-000	4
4	Bracket – 3"	602-1008-001	2
5	Backing plate (use with item 8 if required)	601-1045-000	2
6	#10-32 x 5/8" bolt, nut, and washer set (bolt two x item 3s together, or an item 3 and an item 4 together).	675-1083-000 (bolt)	6
		678-1038-000 (washer)	6
		676-1016-000 (nut)	6
7	#10-32 x 1/2" bolt, washer and nut set (bolt item 1 plates to item 3 or 4 brackets)	675-1086-000 (bolt)	4
		678-1038-000 (washer)	4
		676-1016-000 (nut)	4



**Table 2-3: Lightbar mounting kit (continued)**

Item	Description/usage	Part number	Qty
8	#10-32 x 1 $\frac{3}{4}$ " (and $\frac{3}{4}$ " - optional) bolt, washer and nut set (bolt item 3 or 4 bracket to vehicle - use item 5 backing plates if necessary)	675-1085-000 (1 $\frac{3}{4}$ " bolt)	4
		675-1084-000 ( $\frac{3}{4}$ bolt)	4
		678-1038-000 (washer)	4
		676-1016-000 (nut)	4

## Mounting the Lightbar

### Tools Needed

- Phillips screwdriver
- 3/16" Allen wrench
- 3/8" wrench
- Electric drill
- 1/4" drill bit
- Marker pen




Follow this procedure to mount the lightbar.

1. Secure the left and right flat panel plates to the lightbar using the two #8-32 screws.

---

**Note:** The screw holes are offset to the outside edge of the plate. Also, the front of the lightbar faces the thin edge of the plate and the rear of the lightbar rests on the thick edge of the plate.

---

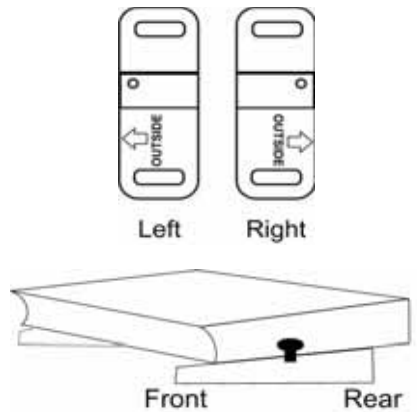

Front of lightbar towards the thin edge of the sloped plates.



---

**WARNING:** If you have the left and right plates reversed it is still possible to line up the plates so the arrows are pointing “outside.” However, the screw holes on the lightbar and the flat panel plate will not line up if you have them reversed.

---

2. Assemble the two sets of 1” brackets\* using the #10-32 x 5/8” bolt, nut, and washer sets.

\*Substitute a 3” bracket for one of the 1” brackets if added height is needed.

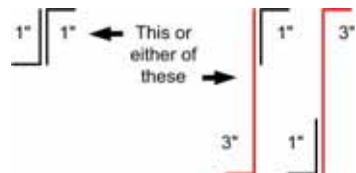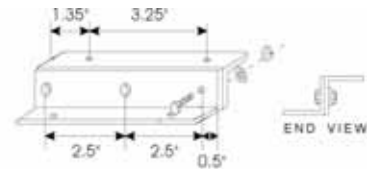


3. Attach the left and right brackets to the lightbar plates using the four #10-32 x 1/2" screw, nut, and washer sets.




4. Using the assembled lightbar and brackets as a template, mark the four mounting hole locations on the surface of the vehicle.

5. Using a 1/4" drill bit, carefully drill the four holes.

 6. Using #10-32 bolts, washers, and nuts secure the lightbar to the vehicle. Use the 1 3/4" or 3/4" bolts depending on if you are mounting the lightbar on a thick or a thin mounting surface



7. If required, attach the backing plates to the underside of the mounting surface for additional reinforcement. The backing plates provide additional support to prevent the bolts from pulling through the surface under vibration.

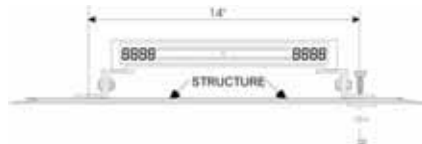

## Antenna



### Mounting Location

Antenna position is critical to system performance. These conditions must be met for proper system operation:

- Mount the antenna at least 5 ft (1.524 m) from transmitting antennas of any frequency.

---

**▲WARNING:** Positioning the antenna less than 5 ft (1.524 m) from transmitting antennas of any frequency may cause overloading of RF circuits.

---

- Mount the antenna at the highest practical point that will give a good view of the horizon.
- The positions that the receiver calculates are at the positions of the antenna. So, if using a swath guidance system, mount the antenna on the center line of the vehicle

### Mounting the Antenna

Hemisphere GPS recommends flush mounting the antenna to the roof of the vehicle.

#### Tools needed

- Phillips screwdriver
- Four #8-32 screws
- Electric drill



## Chapter 2: Mounting the Components

- 1/8" drill bit
- 7/16" drill bit
- Marker pen

Follow this procedure to mount the antenna.

1. Use the A21 antenna mounting template to mark the mounting and antenna connector hole locations on the outer surface of the vehicle.
2. Using a 1/8" drill bit, carefully drill the four screw holes.
3. Using a 7/16" drill bit, carefully drill the hole for the antenna connector.
4. Use four #8-32 thread screws to secure the antenna to the surface of the vehicle.





## **Chapter 3: Connecting the CPU**

Warnings

Connections Diagram

Connecting Cables

## Warnings

Heed all warnings before continuing. Failure to do so could void your warranty.

### General Cable Connection Warnings

---

**⚠ WARNING:**

- Turn off power before connecting or disconnecting cables. Failing to do so can damage the system.
  - Finger-tighten all cable connections. Do not use any tools.
  - Do not route cables alongside power generator wire and other high-noise electric sources. This will cause interference.
  - Do not kink or force cables into sharp bands. This can damage the cable.
  - Store excess cable length with at least a 6-in bend radius.
  - Do not coil the cables. This will introduce noise in the system.
  - Avoid high-temperature exposure (for example exhaust, manifold) when routing cables.
- 

### Antenna Cable Warning

---

**⚠ WARNING:**

- Never connect or disconnect the antenna cable with the power on.
  - Do not route the antenna cable with any other radio system cables. This will cause interference. Keep 12 in apart.
  - If you must cross the antenna cable with other cables, do so at a 90° angle. This will prevent interference between systems.
- 



## Connections Diagram

The following diagram provides a visual representation of the connections of the Bantam system. Refer to this diagram when planning your installation, and again when you are ready to connect the components.



## Connecting Cables

You install each Bantam cable between the CPU and a modular component, for example the antenna cable or the touchscreen, or a peripheral device such as AgLaser. Each cable is labeled with its name and part number and the connections are color coded. Each cable can fit only one port on the CPU—it is impossible to connect a cable to the wrong port.

Line up a connector with its matching pins and gently insert and turn.

---

**WARNING:** Never force connections. Finger-tighten only (do not use tools).

---



### **Connecting the GPIO Cable**

The GPIO cable (part number 051-0244-000) comprises several individual cables: for the spray on/off switch, the swath advance switch, a serial port (DB9) connector.

Follow this procedure to connect the GPIO cable.

1. Connect the Conxall connector end of the cable, part number 051-0244-000#, to the CPU serial port labeled 'GPIO'.
2. Connect the spray on/off switch cable leads to the provided momentary lever switch, part number 075-4001-000. Use the switch in conjunction with your spray system on/off controls to synchronize actual spraying with the spray data collection functionality of Bantam. See also "Using the Flow Control Port" on page 25.

---

**⚠ WARNING:** Do not connect spray on/off leads to a flow system if it contains live voltage. Connection to a DC voltage will damage the circuit.

---

3. (Optional) Connect the swath advance cable leads to push switch, part number 075-4002-000, to control swath advances remotely.

### **Connecting the Lightbar Cable**

1. Connect the Conxall connector of the lightbar cable, part number 051-0022-001, to the CPU port labeled 'LIGHTBAR'.
2. Connect the metal Bendix connector on the lightbar cable to the matching connector on the back of the lightbar.

### **Connecting the Antenna Cable**

Connect the antenna cable, part number 052-0005-000 between the socket on the left side of the CPU and the A21 antenna.



## Connecting a Keyboard and/or Mouse

You can connect a keyboard and a mouse that have USB connectors directly or indirectly (through an extension cable) to the USB ports on either side of the CPU.

## Using the Flow Control Port

Connect the cable that comes with your flow control system—IntelliFlow or IntelliGate—to the flow control port.

## Connecting the Video (VGA) Cable

1. Connect the Conxall connector on cable part number 051-0243-000 to the CPU serial port labeled 'DISPLAY'.
2. Connect the other end of the cable to the red-coded connector on the back of the touchscreen.

## About the Power Cable

The power cable assembly—part number 726-1096-000—comprises the following:

- Power panel on which there is an ON/OFF switch
- Dimmer switch to control the lightbar's brightness
- Circuit breaker that prevents voltage spikes and reverse polarity from damaging the system

---

**Note:** The ON/OFF switch powers the CPU and the touchscreens. It powers the 7" touchscreen directly, the 8.4" touchscreen indirectly (see "Powering the System" on page 30). The dimmer switch on the power panel controls lightbar brightness (both touchscreens have their own display brightness controls).

---



## Connecting the Power Cable

---

**⚠ WARNING:**

- Do not connect to a power source of less than 10 volts.
  - Do not use a cigarette lighter as a permanent power source.
  - Do not reverse the polarity of the power leads—incorrect installation can damage the system. Connect RED to POSITIVE (+) and BLACK to NEGATIVE (-).
- 

1. Connect the Conxall connector to the CPU port labeled 'POWER'.
  2. Connect the red and black power leads to a suitable power source that can supply between 10 and 36 V (for example, vehicle battery, generator).
- 

**⚠ WARNING: (Air Installation)** A potential problem when installing an electronic system in a vehicle is Counter Electromagnetic Force (CEMF). CEMF is caused when relays or solenoids connected to the common vehicle DC power bus are de-energized. The voltage produced may exceed 400 V. CEMF can be produced by equipment such as:

- Electric fan brakes
- Air conditioners
- Starter relays
- Electric pump relays

To eliminate CEMF, install diodes at the relays and solenoids that cause the CEMF and at the power supply cable connection of the SLX system. Use a 47 V, 5 W Zener Diode (1N5368 or equivalent).

---



### **Connecting the USB Extension Cable**

To enable you to easily connect the USB flash drive to one of the CPU's side USB ports, kit part number 710-0087-000 includes an extension cable. Connect the extension cable to either USB side port on the CPU then, using the connector (adaptor), connect the USB flash drive to the extension cable. See also "Inserting and Removing the USB Flash Drive" on page 31.

---

**Note:** You can use the other USB side port for a peripheral device such as a wireless modem, tracking device, keyboard or mouse.

---







## **Chapter 4: Operating Bantam**

Powering the System

Inserting and Removing the USB Flash Drive

Understanding the 7" Screen Control Panel

Adjusting the Display Brightness

Adjusting the Lightbar Brightness

Calibrating the Touchscreen

**N**ow that the system is installed and connected, you are ready to turn it on and use the USB, adjust the display and lightbar brightness, and calibrate your touchscreen.

## Powering the System

The ON/OFF lever switch on the power panel (see “About the Power Cable” on page 25) provides power to the CPU and to the touchscreen but slightly differently for each screen size. When the panel lever switch is turned on:

- The 7" screen is powered directly (even though it has its own power button).
- The 8.4" screen is not powered directly—you have to press its own power button.

Once both screens are on, you can turn them off and on with their own power buttons as long as the panel lever switch is on.

## Turning the CPU and Screens On

Turn on the vehicle’s main power source (vehicle battery, generator, other) and set the ON/OFF lever switch on the power panel to ON. This powers up all components except the 8.4" touchscreen. For the 8.4" touchscreen only, then, also press the power button on the front control panel.



When the system is powered up it will start the Window-based AirTrac software.



---

**Note:** Refer to the AirTrac User Guide for detailed descriptions of the software features and step-by-step instructions on how to use them for basic and advanced operations.

---

## Inserting and Removing the USB Flash Drive

The Bantam system comes with a 2GB USB flash drive for logging and for transferring files. It also comes with an extension cable so you can access a USB port in the CPU remotely (the CPU has two USB ports, one each side). That is, you can plug the extension cable (part of the USB kit part number 710-0087-000) into either CPU USB port and run the cable up to a convenient location in your cockpit or cab. You can then connect the USB flash drive to the extension cable using the supplied connector.

---

**Note:** To use the USB flash drive, you must insert it into the CPU\_(using the remote connector as required) before turning the system on. If you start the system before inserting the USB, turn off the Bantam\*, insert the USB and restart the system. (\*Always turn off the Bantam before removing the USB.)

---

## Understanding the 7" Screen Control Panel





This section provides a brief description of the functions of the buttons and lights on the control panel area of the 7" touchscreen.



What the buttons do sometimes depends on whether the M (Menu) button has already been pressed, that is, if an on-screen menu is open.

Table 4-1 covers both situations.

**Table 4-1: The 7" touchscreen control panel**

Panel Item	Description and Usage
D (Display)	Display brightness. Press to cycle through brightness levels Bright, Mid or Dark. See also "Adjusting the Display Brightness" on page 33.
	Menu closed: Increase/decrease volume (not used). Menu open: Increase/decrease value of selected menu row or switch between two values.
S (Source or Select)	Menu closed: Source - cycle through input sources - AV1, AV2, PC. Menu open: Select - move through the menu options (rows).
M (Menu)	Call up on-screen menus (press twice to access second level menu). Use S to select row, use arrows to change values.
 (on/off)	Power on/off button. While ON/OFF lever switch on the power panel is ON, turns screen off and back on. See also "Turning the System Off" on page 34.
 (power)	When on, screen is powered (power button and power lever ON/OFF switch both on).
	Not used



## Adjusting the Display Brightness

You adjust the display brightness differently for the 8.4" and 7" touchscreens.



8.4" screen



7" screen

To adjust the display brightness of the 8.4" touchscreen, press the brightness up and down arrow buttons.

To adjust the display brightness of the 7" touchscreen, press the D (Display) button on the control panel (below the screen) to cycle the display brightness through Bright, Mid, Dark.

You can also adjust the 7" screen brightness if you have the first menu open by using S to select the Brightness row (if necessary) and using the panel's up and down arrows to change the display brightness to another of the three levels.

## Adjusting the Lightbar Brightness

Adjust the lightbar brightness for night operation by turning the lightbar DIMMER control knob on the power panel.

## Calibrating the Touchscreen

Both the 7" and 8.4" touchscreens are shipped properly calibrated. Touchscreen calibration ensures that the cursor is placed exactly under your finger when you touch the screen.

If you need to recalibrate your touchscreen:

1. Select the ELO icon on the Windows desktop.
2. Follow the on-screen instructions to complete the calibration.
3. Press OK when done to close the window and have the changes take effect.



## Turning the System Off

Before turning off the touchscreen or the main power source, it is important to shut down Windows by following this procedure.

1. Press the **Start** button in the lower left hand corner of the Windows screen.
2. Press **Shut Down**.
3. Highlight the **Shut Down** choice then press **OK**.
4. Wait until you see the message "It's now safe to turn off your computer."
5. Shut down power to the touchscreen by pressing the **Power** button (8.4" touchscreen only). For the 7" touchscreen go to step 6.
6. Turn off system power.



---

## Index

---

### Numerics

#### 7" touchscreen

control panel, understanding 31

D button 32

M button 32

mounting 11

powering 30

S button 32

up and down arrows 32

#### 8.4" touchscreen

mounting 12

powering 30

### A

#### antenna

mounting 19

mounting location 19

antenna cable, connecting 24

arrows, up and down, 7" screen 32

### B

brightness, adjusting 33

#### buttons

arrows, up/down, 7" screen 32

brightness, 8.4" screen 33

control panel, 7" screen 32

D button, 7" screen 32

M(enu) button, 7" screen 32

S button, 7" screen 32

### C

#### cables

connecting 23

connections diagram 23

parts list 4

calibrating, touchscreens 33

components, weight of 5

#### connections

antenna cable 24

cables 23

cables, diagram 23

GPIO cable 24

lightbar cable 24

mouse and keyboard 25

power cable 26

to flow control port 25

USB and extension cable 27

video (VGA) cable 25

control panel, understanding 31

#### CPU

installation 8

installing, clearance 8

introduction to 8

mounting, vertically 8

powering 30

### D

D button, 7" screen 32

display, *see* touchscreen

### E

eight, *see* 8.4" touchscreen

### F

flash drive, *see* USB

#### flow control

IntelliFlow 25

IntelliGate 25

port, using 25



## G

GPIO cable, connecting 24  
green light, 7" screen 32

## I

installation  
    *see also* "mounting"  
    antenna 19  
    CPU 8  
    CPU, clearance 8  
    lightbar 15  
    planning 5  
    power panel 14  
    touchscreens 9  
IntelliFlow, using the flow control port 25  
IntelliGate, using the flow control port 25

## K

keyboard, connecting 25  
kits and switches, parts list 3

## L

lightbar  
    brightness, adjusting 33  
    cable, connecting 24  
    mounting 16  
    mounting kit 15  
    mounting location 15  
lights, control panel, 7" screen 32  
list  
    cables 4  
    parts 2

## M

M button, 7" screen 32  
menu, 7" screen 32  
mounting  
    7" touchscreen 11  
    7" touchscreen kit 9

8.4" touchscreen 12  
8.4" touchscreen kit 12  
antenna 19  
antenna, location 19  
CPU 8  
lightbar 16  
lightbar kit 15  
lightbar, location 15  
power panel 14  
power panel, location 14  
mouse, connecting 25

## P

parts  
    cables, listed 4  
    kits, listed 4  
    list 2  
planning, installation 5  
power  
    8.4" screen 30  
    green light, 7" screen 32  
    panel, mounting 14  
    panel, mounting location 14  
    powering CPU and screens 30  
    switch, 7" screen 32  
power cable  
    about (introduction) 25  
    connecting 26  
power, switching system on and off 34

## S

S button, 7" screen 32  
seven, *see* 7" touchscreen  
shutting down 34  
switches and kits, parts list 3

## T

touchscreen  
    calibrating 33  
    mounting, general 9



powering 30

## **U**

up and down arrows, 7" screen 32

### **USB**

extension cable, using 27

flash drive, connecting to the CPU 27

inserting and removing 31

## **V**

video (VGA) cable, connecting 25

## **W**

warnings

antenna cable 22

cable connections 22

weight, of components 5







## **End User License Agreement**

## END USER LICENSE AGREEMENT

**IMPORTANT** - This is an agreement (the "**Agreement**") between you, the end purchaser ("**Licensee**") and Hemisphere GPS Inc. ("**Hemisphere**") which permits Licensee to use the Hemisphere software (the "**Software**") that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a "**Product**". As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

1. **LICENSE.** Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the "**Software**"), solely in binary executable form.
2. **RESTRICTIONS ON USE.** Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
  - a. install or use more copies of the Software than the number of copies that have been licensed;
  - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
  - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
  - d. modify or create derivative works based on the Software;
  - e. sub-license, rent, lease, loan or distribute the Software;
  - f. permit any third party to use the Software;



- g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
  - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
  - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
3. **UPDATES.** At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update ("**Update**") means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
  4. **SUPPORT.** Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at any time.
  5. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
  6. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
  7. **TRADEMARKS.** "Hemisphere GPS", "Outback Guidance", "BEELINE", "Crescent", "Eclipse" and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
  8. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period,



whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.

9. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (8) will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GPS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.
10. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.
11. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.
12. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.



13. **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.
14. **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
15. **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.
16. **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.
17. **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.
18. **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses,



including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere.

19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a) negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product, (c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.

The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights.

20. **INDEMNIFICATION.** Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption.
21. **TERMINATION.** Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of



Sections 6), 7), 8), 9), 10), 15), 21), 26) and 27) herein shall survive the expiration or termination of this Agreement for any reason.

22. **EXPORT RESTRICTIONS.** Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.
23. **PRODUCT COMPONENTS.** The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.
24. **FORCE MAJEURE EVENT.** Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.
25. **FORUM FOR DISPUTES.** The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.
26. **APPLICABLE LAW.** This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence.
27. **CISG.** The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.
28. **GENERAL.** This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.







[www.hemispheregps.com](http://www.hemispheregps.com)